


TC-610 BEAD BREAKER

NOTE: Read carefully before using tool. The TC-610 Bead Breaker can be used with either a ½" drive impact tool or ½" ratchet.

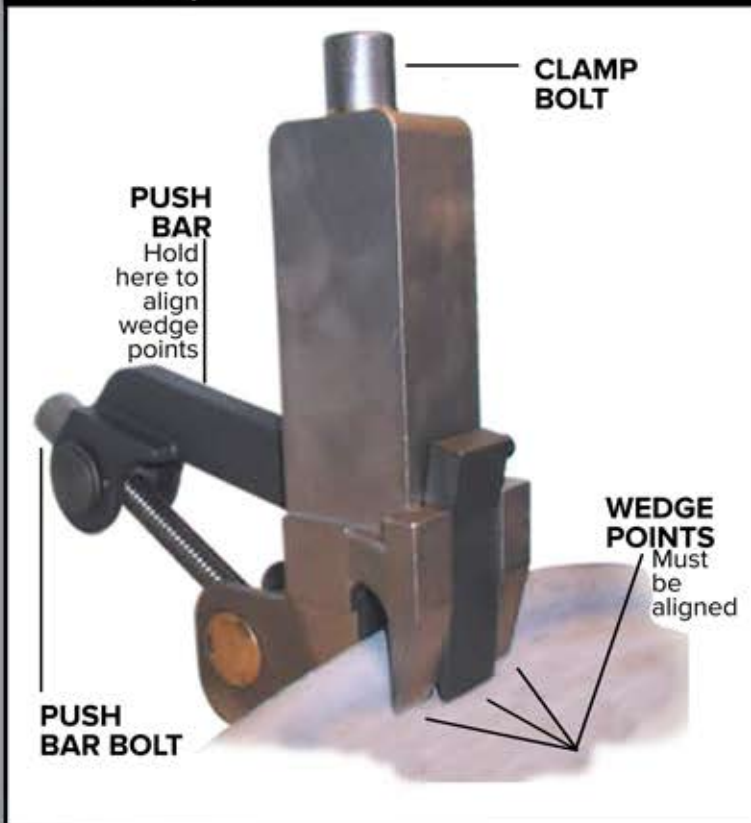

OPERATING INSTRUCTIONS

STEP 1

Make sure the clamp bolt & push bar bolt are loose (see diagram). Align the 3 wedge points by holding the bead breaker by the push bar while loosening or tightening the push bar bolt.

STEP 2

Place all 3 wedge points over rim flange with center wedge placed against the tire iron.

TIP: For rear tractor tires, push the wedge into the pry notch. For tires without the pry notch, drive a wedge or tire tool between the tire and the rim to start the bead breaker wedges.

STEP 3

Tighten clamp bolt. It is important that the wedges are tightened all the way to the rim seat so that the push bar can scrape the rim.

NOTE: Do not over tighten, or it can cause damage to the rim.

TIP: Wedge or tire iron used in Step 2 can now be removed.

STEP 4

Tightened push bar bolt to break tire bead.

TIP: Important to make sure the wedge point is pushing next to the rim seat as pushing too high can result in damage.



Rev. 04.17.2019