

## Replacement Parts

---

*Figure numbers refer to the graphic on the next page.*

<b>Part</b>	<b>Figure</b>	<b>Part No.</b>
Oil Drain Cap ( <i>brass; qty. 6</i> )	1	<b>40572</b>
Oil Drain ( <i>includes cap</i> )	2	<b>48116</b>
Cover Kit ( <i>includes items 1, 2, 4, 5, 16</i> )	3	<b>15337</b>
Oil Fill Cap ( <i>includes gas ballast valve #6</i> )	4	<b>15371</b>
Inlet “Tee” Fitting ( <i>includes caps</i> )	7	<b>15495</b>
Inlet Cap, 1/2" Acme ( <i>qty. 2</i> )	8	<b>15330</b>
Inlet Cap, 1/4" flare nylon ( <i>qty. 6</i> )	9	<b>41139</b>
Vent Bolt ( <i>includes o-rings</i> )	10	<b>15338</b>
Handle, Power Cord, Switch Assembly	11	<b>15366</b>
Motor	12	<b>15344</b>
Coupling	13	<b>48103</b>
Iso-Valve™ Assembly	14	<b>15368</b>
Base and Foot Assembly	15	<b>15369</b>
Module Assembly ( <i>includes items 1–9 &amp; 14</i> )	16	<b>15547</b>
Replacement Seal Kit ( <i>not shown</i> )	17	<b>15367</b>

