


RoboRoller™ Powered Assist Assembly

Powered Assist

Item	Part No.	Description
1	85608884	2.5" RC, Cylinder Assembly
2	902308	1/4-20 x 3/8 Knurled Cup PT SHSS
3	8183637	2" Ext. Retaining Ring
4	8185598	Aux. Roller Assembly
5	85000204	UP/DOWN Decal
6	7000230	1/2" Rubber Hand Grip
7	85611802	Front Arm Weldment (Black)
8	85611866	*Valve Assembly
9	8182001	10-24 x 3/4 Lg. SHCS, Screw
10	8182016	3/4"-10 Nylon Insert Lock Nut, Gr.5
11	85611823	Pivot Pin
12	8182579	Hex Head Cap Screw
13	8181038	Helper Arm Pivot Pin
14	85611806	Rear Arm Weldment (Black)
15	85610016	3/4-10 x 7 HHCS Screw, Gr.5

***Valve Assemblies (available only as individual components, see page 16)**

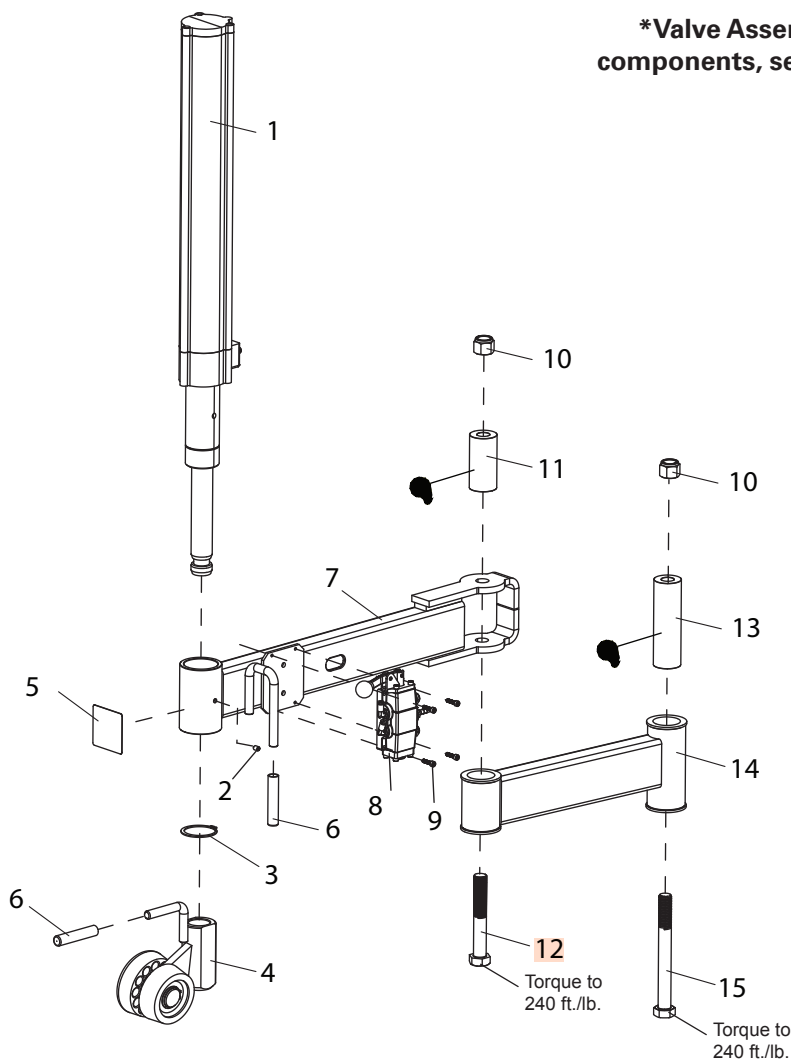


 APPLY GREASE TO THESE LOCATIONS

Chassis System

Item	Part No.	Description	Item	Part No.	Description
**1	80004911	Lube Applicator	19	8182088	5/16-18 x 1-1/4 TPHST Screw, Gr.5
**2	81062591	Lube Bottle (Red)	20	8181855	B.L. Pad
3	8106301	1/4" Hex Hd Self Tap Screw, Gr.5	**21	8181354	Bead Lifting Tool (Optional on Leverless Unit)
**4	8182809	Lube Bottle Bracket	**22	85000783	Lift Tool Bootie Kit, Pkg of 10
5	8182811	Inflation Pedal Cover	23	924724	312-18 Hex Flange Nut
6	8181285	Inflation Pedal Decal	24	856104041	Tank Reservoir w/Cap
7	85607585	Metal Side Panel	25	81856301	Tank Reservoir Cap, Red Push-On St
8	8182040	M10-1.5 x 55MM Hex Hd.Cap Scr, Gr.8.8	8561040601		Tank Reservoir Cap Black Screw-On Style
9	8301032	3/8 Flat Washer, Zinc Plate	26	8183452	5/16-18x5/8 HWHCS Screw
10	8107715	3/8-16 x 1-1/4 Hex Hd. Cap Scr, Gr.5	**27	85000850	Tire Paste Brush
11	8181964	Plastic Accessory Tray	**28	81837101	Universal Mounting Paste
	85608840	Plastic Accessory Tray for Air Nozzle	**29	85009048	Lube Bucket Bracket & Brush Kit
12	8183770	Lubricator Bracket	30	85608894	Inflation Nozzle Cone
13	8183778	Lubrication Notice Decal	31	85611051	Washer
14	8182579	3/4 x 5 Grade 5 bolt	32	8104573	3/4" Straight Fitting
15	85612239	Water Separator Assy (Air Motor Machines Only)	33	85610108	Plug, 1" Dia.
16	8182016	5/8-11 Hex Nut	34	8101346	Clamp-Hose, 1/2 X 1-1/4
17	85611555	Chassis	35	85611051	Bushing-Nylon Dia. 1.5
			36	85610631	Cover Assembly

**Accessory

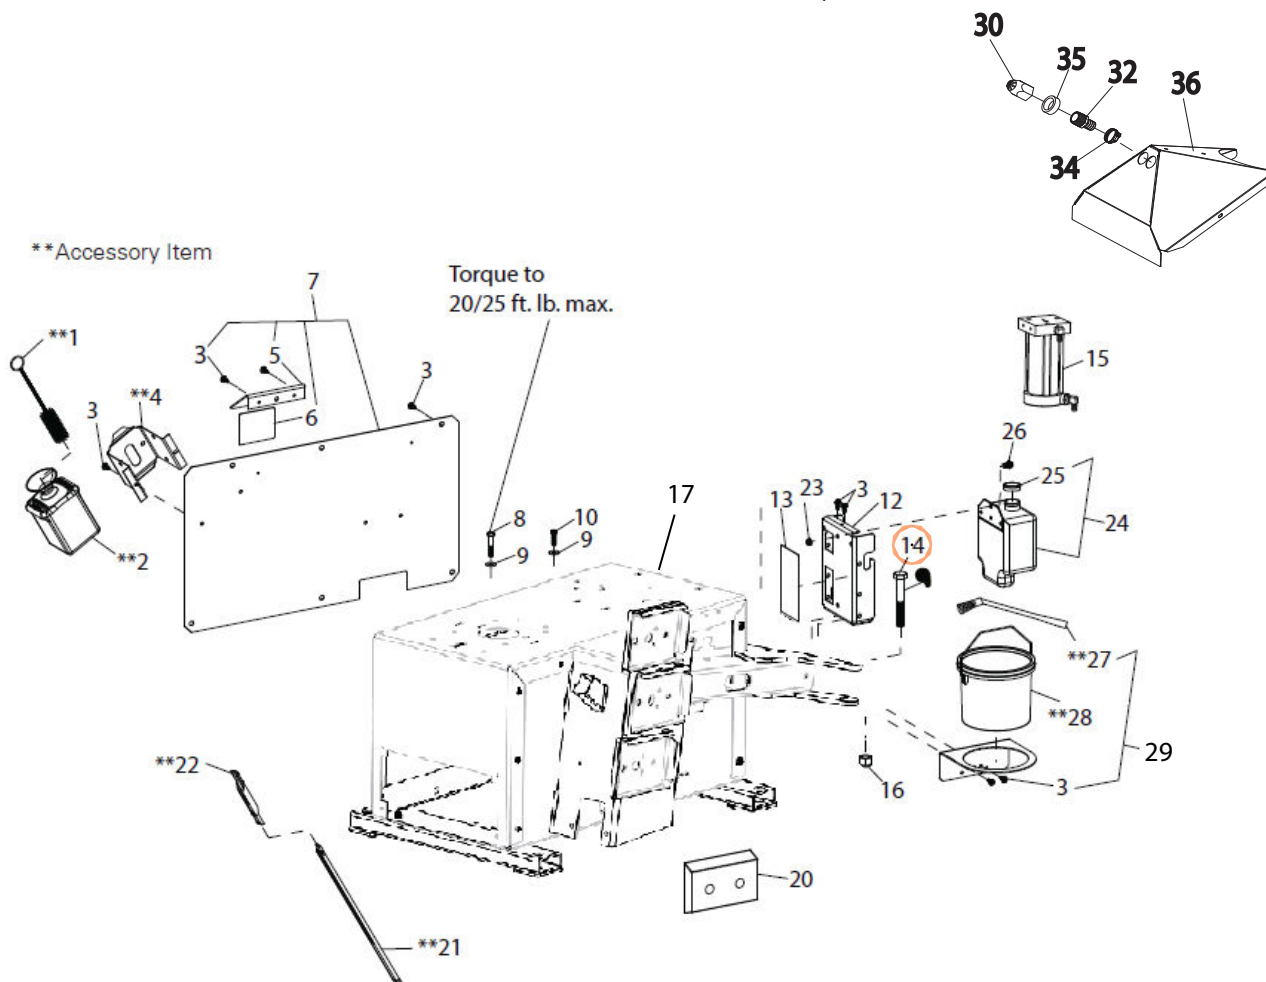

APPLY GREASE TO THESE LOCATIONS

BL Arm Assembly

Item	Part No.	Description	Item	Part No.	Description
1	81833126	B.L. Cylinder	16	85610515	Pivot Assembly
2	8181949	5/8 x 1-3/8 Clevis Pin	17	8181970	Bead Loosener Decal
3	8181912	Clevis Clip	18	8182579	3/4-10x5" Bolt
4	8182016	3/4"-10 Nylon Insert Lock Nut, Gr.5	19	85612993	B.L. Arm
5	85608567	Spacer	20	81855583	Shoulder Screw (sold as 3 pack)
6	85608038	B.L. Shoe	21	925757	10/24 x 1" HHCS Screw
7	8182043	5/8-11 Nylon Insert Lock Nut Gr.5	22	8301035	3/8-16 Hex Nyloc Nut
8	8181951	B.L. Shoe Pivot Bracket	23	8182682	10-24 Nylon Insert Lock Nut Gr.5
9	85613000	Pivot Pin	24	85611517	Link-Hndl,B/L
10	8182011	5/8-11 x 5" Hex Hd Cap Scr, Gr.5	25	85611516	Coupling - Hndl, B/L
*11		see p.16 B.L. Arm Valve	26	85610228	B.L. Lever Handle
12	902189	1/4-20 x.504 HHCS	27	85608569	Heim Joint
13	8182009	3/4-10 x 3 3/4" HHCS	28	8182178	Nut-Hex, 5/16-18, Whz Lck
14	8120326	ø1/2" Hitch Pin	29	85608287	BL Shoe Assembly
15	85608566	Spacer			

***Valve Assemblies (available only as individual components, see page 16)**

