

Duckhead® Roller Kit 85606462

Hennessy Industries • 1601 J.P. Hennessy Drive, LaVergne, TN 37086-3565 (800) 688-6359 • (615) 641-7533 • (615) 641-5104 FAX • www.ammcoats.com

This is an addendum instruction for the Duckhead Roller attachment. If you need copies of COATS® tire changer operating instructions call 1-800-688-6359 or refer to the internet at www.ammcoats.com.

Duckhead Roller Mount Installation

- 1. Remove screw, washer and duckhead.
- **2.** Install the arm bracket (duckhead roller mount) as shown with its hole positioned toward the inner side of the swing arm.

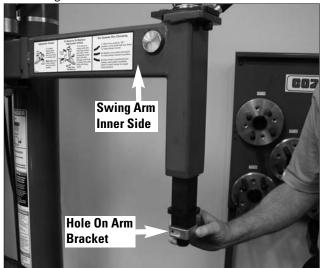


Figure 1 - Position Hole On Arm Bracket To Face Inner Side of Swing Arm

3. Then, assemble in order the duckhead, washer and screw.



Figure 2 - Reinstall Duckhead

4. Torque screw to: 20 - 26 ft-lbs.

Using the Duckhead Roller

- **1.** Lubricate both tire beads liberally. Performance tires will require more lubrication than standard passenger car tires.
- **2.** Mount the lower bead. In most cases, the lower bead will mount easily.

Note: Mounting the top bead can be very difficult when mounting new tires on performance and custom wheels. Proceed slowly and cautiously.

3. For top bead installation, rotate table top until the valve stem on wheel is 180 degrees ahead of the duckhead (9 o'clock position). Attach duckhead roller assembly to the duckhead using RoboArmTM to assist (fig 3).

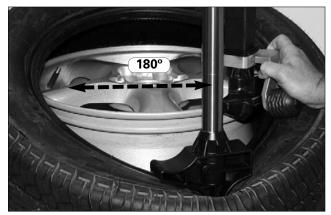


Figure 3 - Position Valve Stem 180° Ahead of Duckhead

3a. Make sure the duckhead roller assembly is fully engaged on the arm bracket; with no gap (figure 4).



Figure 4 - Duckhead Roller Properly Mounted On Bracket

3b. Pull the ring on the duckhead roller to engage it to the arm bracket, (figure 5). Note that pulling the ring will also disengage the duckhead roller from the arm bracket.



Figure 5 - Pull Ring/Pin To Engage Duckhead Roller

4. Use RoboArm[™] to push down on tire 90 degrees clockwise from duckhead to allow bead to utilize drop center area of rim. Apply extra lubricant to mount upper bead.



Figure 6 - Use RoboArm To Hold Tire In Rim Drop Center

5. Depress table top pedal and rotate tire until bead is mounted. Be careful to ensure bead stays in the rim drop center in the area ahead of duckhead.



Figure 7 - Mounting Top Bead