


ATV CLAMP INSTRUCTIONS


(ATV KIT P/N 183585) TALL CLAMPS
 (ATV DIT P/N 181892) SHORT CLAMPS

HOW TO IDENTIFY SHORT OR TALL CLAMPS:

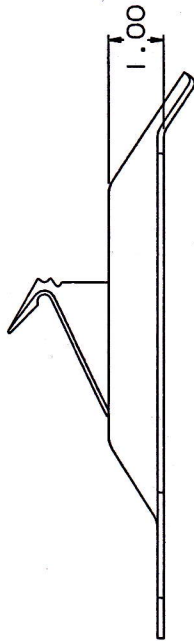


OLDER RC MACHINES
 INDIVIDUAL CLAMP PART # 235745
 KIT, SET OF (4), PART # 181892

PULL LATCH OUT &
 ROTATE CLAMP TO
 INSTALL OR REMOVE

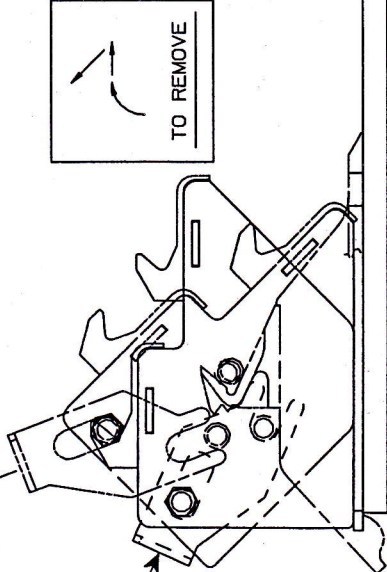


PUSH LATCH IN
 TO LOCK IN PLACE

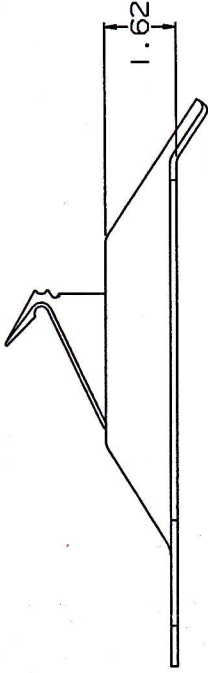

NEWER RC MACHINES & RC-100
 INDIVIDUAL CLAMP PART # 183453
 KIT, SET OF (4), PART # 183585

INDIVIDUAL CLAMP JAW
 PART # 183248
 LOCK HANDLE
 (LATCH)

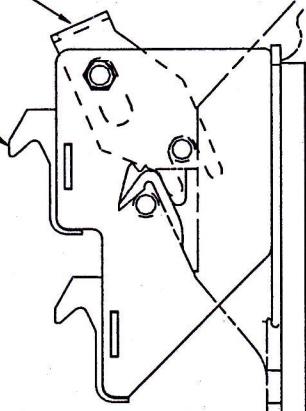

FIT M/C CLAMP OVER EXISTING CLAMP ON TABLE
 TOP & PUSH LOCK HANDLE IN PLACE. PULL HANDLE
 TO RELEASE LOCK.

NOTE:

- 1) AIR PRESSURE SHOULD BE REGULATED TO 100 PSI
 MAXIMUM WHEN USING THESE ACCESSORIES.
- 2) ALWAYS OBSERVE SAFE MOUNTING PROCEDURES
 AND USE APPROVED RUBBER TIRE LUBRICANT
 LIBERALLY.