


Leverless Power Duckhead Bead Lifter Qualifying Test For Machine Compatibility

1. Push down on mount/demount head while pulling up on table top. Record distance - top of clamp to bottom of mount/demount head.

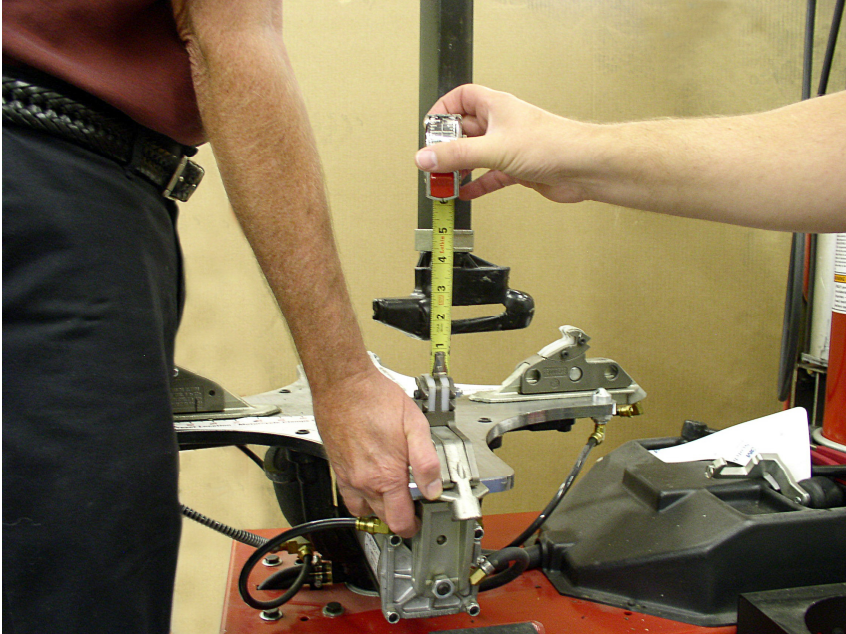

2. Now, pull up on mount/demount head while pushing down on table top. Record distance - top of clamp to bottom of mount/demount head.



3. Subtract step 1 distance from step 2 distance. If distance is greater than 3/8-inch then machine is not compatible.

Note: If the machine is not compatible, please contact COATS® at 1-800-688-9240 for the Certified Service Partner nearest you.