



REPAIR PARTS

No.	Description	Part No.
1	Main Body	100-102
2	Cap Screw	100-103
3	Thrust Washer	100-104
4	Clamp Bolt	100-105
5	Clamp Nut	100-106
6	Spacer	100-107
7	Bolt 1/4" x 1 1/2"	100-108

No.	Description	Part No.
8	Clamp	100-109
9	Push Bar	100-110
10	Push Bar Nut	100-111
11	Push Bar Bolt	100-112
12	Thrust Bar	100-113
13	Retaining Ring	100-114

Order parts from your distributor or jobber.

When ordering parts always give the following information: Part number, description and serial number of your machine.